



MARKSMAN

QUIVERS

SET BACK BRACKET INSTRUCTIONS

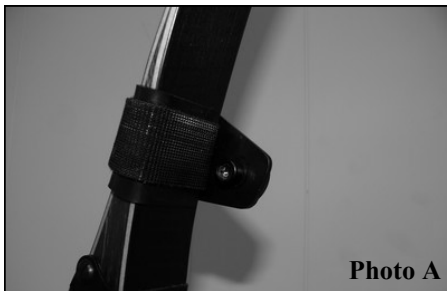


Photo A

Step 1: Install bracket using supplied Instructions. If bracket is of an existing setup, remove hood or gripper section. (Photo A)

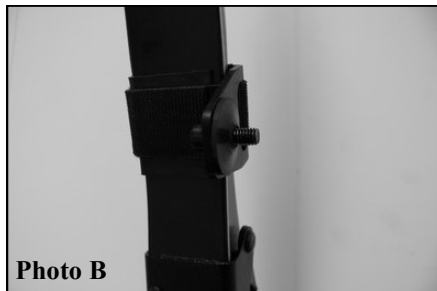


Photo B

Step 2: Apply plastic 6mm washer to socket cap screw and insert through 6mm hole in bracket, add 25mm rubber washer to hold socket cap screw in place on other side. (Photo B)



Photo C

Step 3: Mate the nutsert end of set back bracket on to socket cap screw over 25mm rubber washer (Photo C)

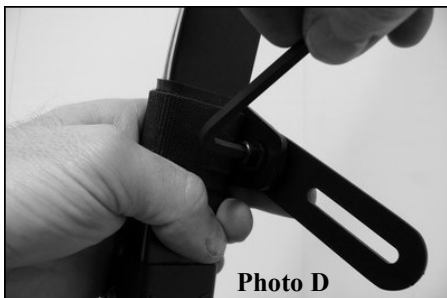


Photo D

Step 4: Using the 5mm hex key supplied with your bow quiver, tighten into the desired position.

DO NOT OVER TIGHTEN.

(Photo D)



Photos E

Step 5: Insert the T- thumb screw and plastic 6mm washer through the 6mm slot and add the 25mm rubber washer to hold socket cap screw in place on other side.

(Photo E)



Photo F

Step 6: Mate the hood or gripper section onto the T- thumb screw and tighten at desired position and angle. DO NOT OVER TIGHTEN.

(Photo F)



Photo G

Step 7: Repeat for other bracket if applicable, and strive to keep hood base and gripper section parallel and at the same angle.

Keep in mind the further away the hood and gripper section are mounted from the main bracket, the less stable this setup may become. (Photo G)