

# MARKSMAN

---

# QUIVERS

## SHOULDER STRAP INSTRUCTIONS

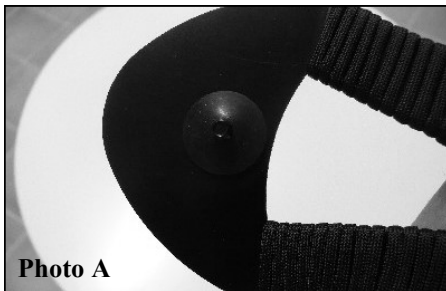


Photo A

**Step 1:** Starting at the narrow end, place the plastic washer over the bolt and insert through the base plate 6mm hole. Put the 25mm (1") rubber washer over the bolt threads to retain the bolt. (Photo A)

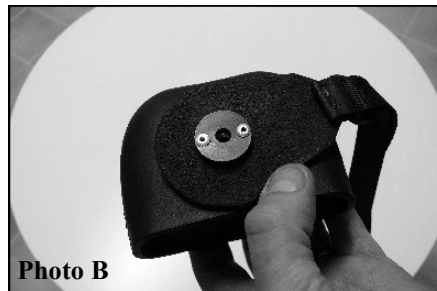


Photo B

**Step 2:** Insert plastic spacer on back of hood, through leather strap end with rough side of leather up (Photo B)

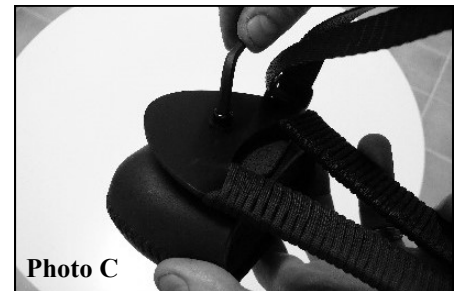


Photo C

**Step 3:** Mate the female threaded section of spacer with male threaded bolt and tighten till snug.

**DO NOT OVER TIGHTEN.**

(Photo C)



Photo D

**Step 4:** Repeat process of inserting bolt in wide end of base plate, then insert spacer on back of gripper through leather strap end rough side up. Mate the female threaded section of spacer with male threaded bolt and tighten till snug.

**DO NOT OVER TIGHTEN.**

(Photo D)



Photos E

**Step 5:** Decide which side you will be having the quiver positioned on and move the strap to the corresponding side, by rotating the leather strap ends (Photo E)



Photo F

**Step 6:** Using the corresponding Press stud to the side you have the quiver on will help to keep the quiver at a more usable 45degrees this helps act against the extended leverage of the arrows. If you want your quiver to sit horizontally these do not need to be used. (Photo F)

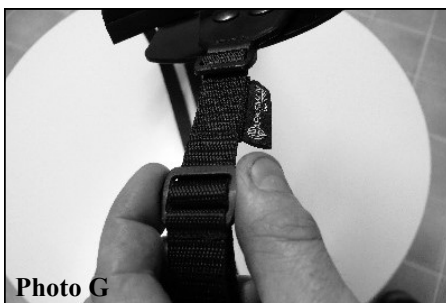


Photo G

**Step 7:** Adjust strap length by moving this 3 bar slider up and down the strap. (Photo G)